

Hand Cuffs™

Handlebar Covers

SNOWSPORT®

- Sold as a pair
- Universal Fit

Fast attach with one screw fastener and buckled strap.



Doesn't block controls on handle bars & works in conjunction with heated grips



Perfect for ATVs, Snowmobiles, & Dirt bikes



Hand Cuffs™

Handlebar Covers

Shield your hands and cuffs from wind, cold and the elements while out on the trail



HAND CUFFS™ Installation Instructions

PARTS:


Hand Cuffs (2x)

Plastic fastener (2x)


TOOL NEEDED:

Phillips screw driver

- 1) Hold Hand Cuff over handle bar grip and controls as shown.

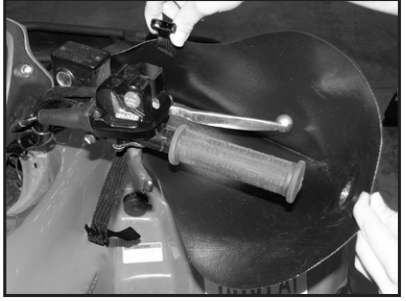


- 2) Route male buckle strap around handle bar and under cable controls when space allows - or over if no space. Snap buckle ends together.

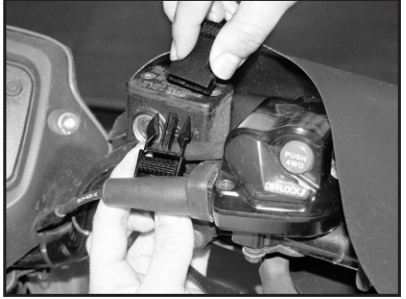


- 3) Pull draw strap on Hand Cuff until almost snug, **leaving some slack in strap.**



- 4) Insert plastic fastener in grommet on Hand Cuff and align point in center of rubber grip. With Phillips screw driver, thread fastener into rubber grip until snug. *See note at bottom if machine has handle bar warmers.*

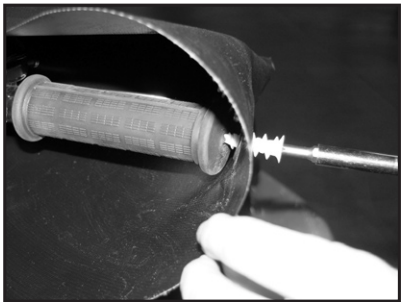

- 5) If needed, pull on leading edge of Hand Cuff to form streamlined shape as shown.

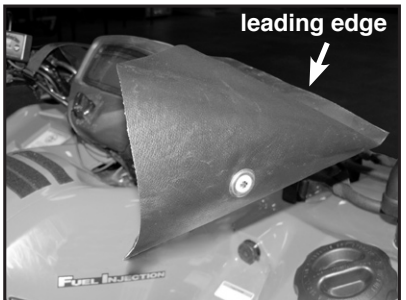

- 6) Repeat procedures for other Hand Cuff on opposite side.



⚠ Make sure all controls are fully operational and easily accessible before operating machine.

NOTE: If machine has *handle bar warmers*, remove existing fastener in end of grip and reuse it to attach HAND CUFFS™ to handle bar (plastic fasteners will not be used).