

# SPEC-D *Turning*

## 2000-2003 HONDA S2000 DUAL HALO PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

\*If you experience any difficulties that the instructions did not cover, Please seek assistance at local automotive shop.

\*Please wear protection before you work on your vehicle.

\*An assistant is useful when removing the front bumper from your vehicle.

\*Please be cautious when working with the bumper or any parts belonging to the vehicles' body prevent scratching.

\*Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



### TOOLS AND SUPPLIES REQUIRED

1/4" Drive Ratchet

Phillips Screwdriver

1/4" Drive 6" Extension

Trim Pad Remover

10mm Socket

Small Vice Grip

If your Headlight is Halo type, you also need:

4 Blue Male Quick Wire Connectors

Wire Stripper

4 Blue Female Quick Wire Connectors

Wire Cramer

2 Red Wires (8 inch)

4 Blue Quick Splice Wire Connectors

2 Black Wires (8 inch)

### Product Part Numbers:

2LHP-S2K00JM-TM

2LHP-S2K00-TM



## 2000-2003 HONDA S2000 DUAL HALO PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

\*If you experience any difficulties that the instructions did not cover, Please seek assistance at local automotive shop.

\*Please wear protection before you work on your vehicle.

\*An assistant is useful when removing the front bumper from your vehicle.

\*Please be cautious when working with the bumper or any parts belonging to the vehicles' body prevent scratching.

\*Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



1. Bottom of the front bumper



2. Remove the (6) 10mm bolts



3. Remove the (3) clips



4. Remove the phillips head screw from the wheel well



5. Top of the front bumper



6. Remove the (5) Phillips head screws



7. Remove the bracket



8. 10mm bolt location



9. Unlatch the sides of the bumper



10. Remove the (5) washers




11. Unscrew the (4) 10mm bolts



12. Unscrew the (4) 10mm bolts



12. Remove the bracket

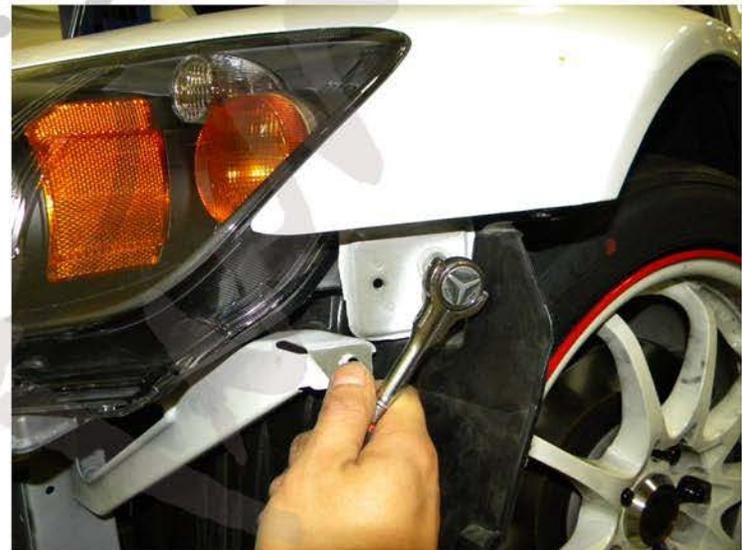

13. Remove the 10mm bolt located on the side of the headlight housing



15. Location of the 10mm bolt under the headlight housing



16. Remove the 10mm bolt located under the headlight housing



17. Location of the (2) 10mm bolts are towards the top side of the headlight



18. Remove the metal headlight bracket



19. Remove the wiring harness and the sockets from the headlight housing



20. Remove the connector



21. Screw location

Please see the "Halo and L.E.D installation instructions"  
If your headlights don't have HALO or L.E.D. You can skip this step



22. Remove the screw



23. Remove the ground wire



24. Remove the HID light socket



25. Remove the HID bulb



26. (4) 10mm bolts location



27. Remove the (4) 10mm bolts



28. Remove the ballast assembly



29. Remove the foam grommet



30. Place and secure the HID bulb in the new headlight



31. Connect the ground connector on the new headlight




32. Connect the HID socket to the HID bulb



33. Place the foam grommet on the new headlight



34. Place the ballast on the new headlight ,and tighten the (4) 10mm bolts

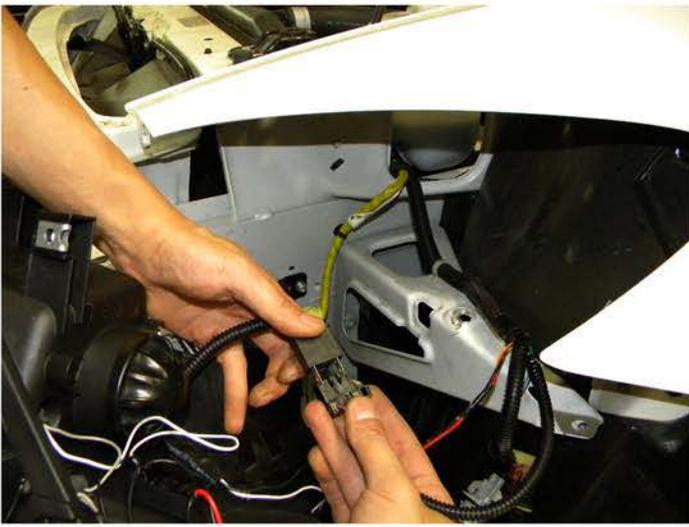

35. Reconnect all the harnesses and sockets to the new headlight  
Please see the "Halo and L.E.D installation instructions"  
If your headlights don't have HALO or L.E.D. You can skip this step



36. Place the new light into the proper location



37. Replace and tighten the 10mm bolt located underneath the headlight housing



38. Replace and tighten the 10mm bolt located on the side of the housing




39. Tighten the (2) 10mm bolts located on the top side



40. Replace the bracket under the headlight and tighten the (4) 10mm bolts



41. Replace the front bumper

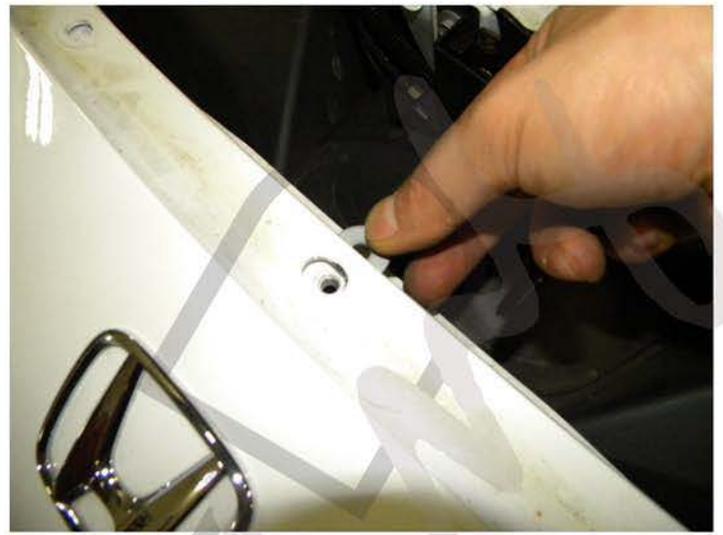

42. Replace the (5) washers under the top mounting points of the bumper



43. Replace the bracket



44. Secure the (5) phillips head screws



45. Replace and tighten the phillips head screw in the wheelwell



46. Replace and tighten the phillips head screws in the wheelwell



47. Replace the (3) clips and the (6) 10mm bolt on the bottom of the front bumper



48. Replace the (3) clips and the (6) 10mm bolts on the bottom of the front bumper



49. Please repeat the steps in order from 1 to 48 for the opposite side



50. . The installation is now complete

START HERE