





1

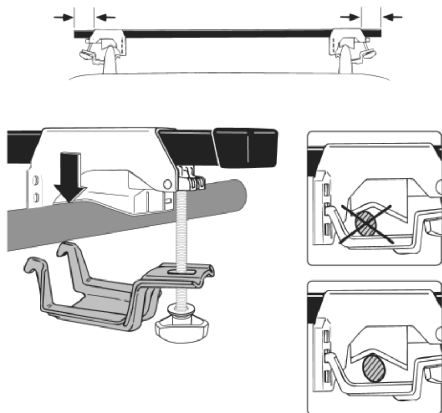


- Position the load bars on the roof rails with a minimum spacing of 700mm. Ideally the load bars should be positioned at a uniform spacing from the roof rail supports. Slide the Railing Feet along the bars until the roof rails are centred in the angle of the profile protector. Ensure that the load bars protrude beyond the feet by an equal amount on both sides.

2

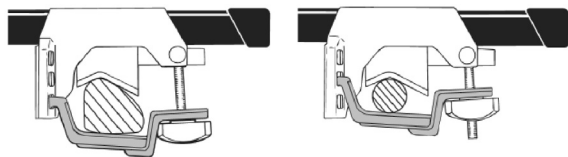


- The brackets can be fitted in any of three positions depending on the shape of the railings to which the load carrier is to be attached. Hook the brackets up to one of the three positions on the Railing feet.

3

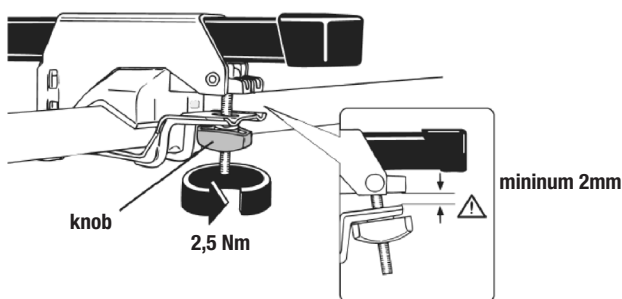


- Tighten the knobs firmly (torque 2,5 Nm), and check that the gap is at least 2 mm in each case. If the gap is less than 2 mm, unscrew the knobs and hook the brackets into a higher set of holes.

4

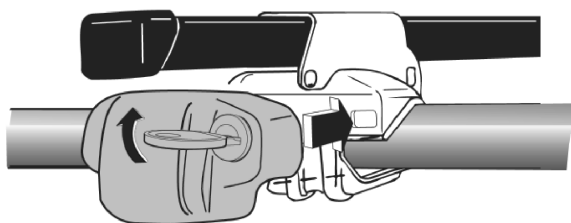

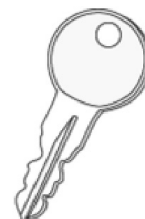

- Attach the covers.





2013 COMPLETE ROOF RACK SYSTEM - SR1009 - FIT GUIDE

Vehicle Make and Model	Year	 Weight Limit		 Fit Tips
		Lbs	Kg	

AMC

MDX w/ Factory Rack	07-13	130	59	
RDX w/ Factory Rack	07-12	130	59	
TSX Sport Wagon w/ Factory Rack	11-13	130	59	

AUDI

100 Wagon w/ Factory Rack	88-92	130	59	
100 Wagon w/ Factory Rack	93-94	130	59	
200 Wagon w/ Factory Rack	93-94	130	59	
200 Wagon w/ Factory Rack	88-92	130	59	
A4 Wagon w/ Factory Rack	02-08	130	59	
A4 Wagon w/ Factory Rack	97-01	130	59	
A6 Wagon w/ Factory Rack	99-05	130	59	
A6 Wagon w/ Factory Rack	95-98	130	59	
Allroad	13	130	59	
Allroad	99-05	130	59	
S6 Wagon w/ Factory Rack	95-97	130	59	

BMW

3 Series Wagon w/ Factory Rack	00-10	130	59	
3 Series Wagon w/ Factory Rack	00-10	130	59	
5 Series Wagon w/ Factory Rack	11	130	59	
5 Series Wagon w/ Factory Rack	04-10	130	59	
5 Series Wagon w/ Factory Rack	99-03	130	59	
X3 w/ Factory Rack	04-10	130	59	
X5 w/ Factory Rack	07-13	130	59	
X5 w/ Factory Rack	00-06	130	59	

BUICK

Century Wagon w/ Factory Rack	84-96	130	59	
Skyhawk Wagon w/ Factory Rack	82-89	130	59	

CADILLAC



SRX w/ Factory Rack	10-13	130	59	
SRX w/ Factory Rack	04-09	130	59	

CHEVROLET

Astro Van w/ Factory Rack	85-05	130	59	
Blazer 3DR w/ Factory Rack	82-94	130	59	
Blazer 5DR w/ Factory Rack	95-05	130	59	
Blazer 5DR w/ Factory Rack	91-94	130	59	
Blazer C/K 3DR w/ Factory Rack	92-94	130	59	
Blazer C/K 5DR w/ Factory Rack	92-94	130	59	
Cavalier Wagon w/ Factory Rack	82-94	130	59	
Celebrity Wagon w/ Factory Rack	84-89	130	59	
Spark w/ Factory Rack	13	130	59	
Suburban w/ Factory Rack	92-99	130	59	
Tahoe 3DR w/ Factory Rack	95-99	130	59	



2013 COMPLETE ROOF RACK SYSTEM - SR1009 - FIT GUIDE

Vehicle Make and Model	Year	 Weight Limit		 Fit Tips
		Lbs	Kg	

CHEVROLET (continued - suite - consecuencia)

Tahoe 5DR w/ Factory Rack	95-99	130	59	
Tracker 5DR w/ Factory Rack	99-04	130	59	
Trax w/ Factory Rack	13	130	59	
Venture w/ Factory Rack	97-05	130	59	

CHRYSLER

Caravan w/ Factory Rack	88-95	130	59	
Town & Country w/ Factory Rack	96-00	120	55	
Town & Country w/ Factory Rack	84-95	120	55	

DAEWOO

Nubira Wagon w/ Factory Rack	99-00	130	59	
------------------------------	-------	-----	----	--

DODGE

Aries Wagon w/ Factory Rack	81-89	130	59	
Caravan / Grand Caravan w/ Factory Rack	96-00	120	55	
Caravan / Grand Caravan w/ Factory Rack	84-95	120	55	
Colt Minivan w/ Factory Rack	92-96	130	59	
Colt Minivan w/ Factory Rack	84-91	130	59	
Colt Vista 5DR w/ Factory Rack	84-91	130	59	
Durango w/ Factory Rack	04-09	130	59	
Journey w/ Factory Rack	08-12	130	59	
Neon 4DR w/ Factory Rack	94-99	130	59	

EAGLE

Summit Minivan w/ Factory Rack	92-96	130	59	
Vista Minivan w/ Factory Rack	84-91	130	59	

FORD

Edge / Edge Sport w/ Factory Rack	11-13	90	41	
Edge / Edge Sport w/ Factory Rack	07-10	90	41	
Escape w/ Factory Rack	13	90	41	
Escape w/ Factory Rack	08-12	90	41	
Escape (Glass Roof) w/ Factory Rack	13	45	20	
Focus Wagon w/ Factory Rack	00-07	105	48	
LTD Crown Victoria Wagon w/ Factory Rack	79-91	130	59	
Windstar w/ Factory Rack	95-98	90	41	
ZTW Wagon w/ Factory Rack	00-07	130	59	

GMC



Envoy w/ Factory Rack	99-01	130	59	
Jimmy 3DR w/ Factory Rack	82-94	105	48	
Jimmy 5DR w/ Factory Rack	95-02	130	59	
Jimmy 5DR w/ Factory Rack	91-94	130	59	
Safari w/ Factory Rack	85-03	130	59	
Yukon 5DR w/ Factory Rack	92-99	130	59	

HONDA

Accord Wagon w/ Factory Rack	94-95	90	41	
------------------------------	-------	----	----	--



2013 COMPLETE ROOF RACK SYSTEM - SR1009 - FIT GUIDE

Vehicle Make and Model	Year	 Weight Limit		 Fit Tips
		Lbs	Kg	

HONDA (continued - suite - consecuencia)

Accord Wagon w/ Factory Rack	91-93	90	41	
Civic Wagon w/ Factory Rack	88-91	130	59	
Crossroad w/ Factory Rack	93-98	130	59	
CRV w/ Factory Rack	99-01	60	27	
CRV w/ Factory Rack	97-98	60	27	
Odyssey w/ Factory Rack	11-13	120	55	
Odyssey w/ Factory Rack	05-10	120	55	
Passport w/ Factory Rack	98-00	130	59	
Pilot w/ Factory Rack	09-13	130	59	
Pilot w/ Factory Rack	02-08	120	55	

HYUNDAI

Elantra Touring Wagon w/ Factory Rack	09-12	130	59	
Elantra Wagon w/ Factory Rack	96-01	130	59	
Entourage w/ Factory Rack	07-10	130	59	
Santa Fe w/ Factory Rack	01-06	60	27	1a
Tucson w/ Factory Rack	10-13	120	55	
Tucson w/ Factory Rack	05-09	120	55	

INFINITI

EX35 w/ Factory Rack	08-13	130	59	
EX37 w/ Factory Rack	13	130	59	
FX35 w/ Factory Rack	03-13	130	59	
FX45 w/ Factory Rack	03-08	130	59	
FX50 w/ Factory Rack	09-13	130	59	

ISUZU

Rodeo 5DR w/ Factory Rack	98-03	90	41	
---------------------------	-------	----	----	--

KIA

Borrego w/ Factory Rack	09-12	130	59	
Rio RX-V 5DR w/ Factory Rack	02-05	130	59	
Rondo w/ Factory Rack	09-12	80	36	
Sedona w/ Factory Rack	06-12	130	59	
Sedona w/ Factory Rack	02-05	90	41	
Sorento w/ Factory Rack	11-13	90	41	
Sorento w/ Factory Rack	03-09	90	41	
Sportage w/ Factory Rack	10	80	36	
Sportage w/ Factory Rack	05-09	80	36	

LADA

Niva 3DR w/ Factory Rack	76-99	130	59	
--------------------------	-------	-----	----	--

LAND ROVER



Discovery w/ Factory Rack	95-03	130	59	
---------------------------	-------	-----	----	--

LEXUS

GX 470 w/ Factory Rack	04-13	130	59	
RX 330 w/ Factory Rack	04-07	130	59	



2013 COMPLETE ROOF RACK SYSTEM - SR1009 - FIT GUIDE

Vehicle Make and Model	Year	 Weight Limit		 Fit Tips
		Lbs	Kg	

LEXUS (continued - suite - consecuencia)

RX 350 w/ Factory Rack	04-07	130	59	
RX 400h w/ Factory Rack	04-07	130	59	

LINCOLN

Aviator w/ Factory Rack	03-05	90	41	
MKX w/ Factory Rack	11-12	90	41	
MKX w/ Factory Rack	07-10	90	41	
Navigator w/ Factory Rack	98-13	130	59	

MAZDA

6 Wagon w/ Factory Rack	04-08	130	59	
CX-5 w/ Factory Rack	13	130	59	
Navajo 3DR w/ Factory Rack	91-94	90	41	
Tribute w/ Factory Rack	08-11	130	59	

MERCEDES-BENZ

C Class Wagon w/ Factory Rack	01-12	130	59	
E Class Wagon w/ Factory Rack	11-13	130	59	
E Class Wagon w/ Factory Rack	04-10	130	59	
E Class Wagon w/ Factory Rack	98-03	130	59	
E Class Wagon w/ Factory Rack	94-96	130	59	
GL Class w/ Factory Rack	06-13	130	59	
GLK Class w/ Factory Rack	09-13	130	59	
M Class w/ Factory Rack	12-13	130	59	
M Class w/ Factory Rack	06-11	130	59	
M Class w/ Factory Rack	98-05	130	59	

MERCURY

Grand Marquis Wagon w/ Factory Rack	79-91	130	59	
Mariner w/ Factory Rack	05-10	105	48	

MITSUBISHI

Colt Minivan w/ Factory Rack	84-91	130	59	
Expo w/ Factory Rack	92-96	90	41	
Outlander w/ Factory Rack	11-13	130	59	
Outlander w/ Factory Rack	07-10	130	59	
Space Runner w/ Factory Rack	92-99	130	59	
Space Wagon w/ Factory Rack	92-97	130	59	

NISSAN



Murano w/ Factory Rack	03-13	130	59	
Quest w/ Factory Rack	12-13	125	57	
Quest w/ Factory Rack	04-11	125	57	
Rogue w/ Factory Rack	08-13	105	48	
X-Trail w/ Factory Rack	08-10	130	59	

OLDSMOBILE

Bravada 3DR w/ Factory Rack	82-94	130	59	
Bravada 5DR w/ Factory Rack	95-02	130	59	



2013 COMPLETE ROOF RACK SYSTEM - SR1009 - FIT GUIDE

Vehicle Make and Model	Year	 Weight Limit		 Fit Tips
		Lbs	Kg	

OLDSMOBILE (continued - suite - consecuencia)

Bravada 5DR w/ Factory Rack	91-94	130	59	
Cutlass Cruiser Wagon w/ Factory Rack	84-96	130	59	
Silhouette w/ Factory Rack	97-04	130	59	

PEUGEOT

405 Wagon w/ Factory Rack	90-91	130	59	
505 Wagon w/ Factory Rack	84-91	130	59	

PLYMOUTH

Colt Minivan w/ Factory Rack	92-96	130	59	
Colt Minivan w/ Factory Rack	84-91	130	59	
Colt Vista w/ Factory Rack	84-91	130	59	
Grand Voyager w/ Factory Rack	96-99	130	59	
Grand Voyager w/ Factory Rack	88-95	130	59	
Neon 4DR w/ Factory Rack	94-99	130	59	
Reliant Wagon w/ Factory Rack	81-89	130	59	
Voyager w/ Factory Rack	96-01	105	48	
Voyager w/ Factory Rack	96-99	105	48	
Voyager w/ Factory Rack	84-95	105	48	

PONTIAC

6000 Wagon w/ Factory Rack	84-91	130	59	
Montana w/ Factory Rack	00-04	130	59	
Safari Wagon w/ Factory Rack	89	90	41	1b
Sunbird Wagon w/ Factory Rack	82-94	130	59	
Trans Sport w/ Factory Rack	97-99	90	41	

SAAB



9-3 SportCombi Wagon w/ Factory Rack	06-12	130	59	
9-4x w/ Factory Rack	12-13	130	59	
9-5 Wagon w/ Factory Rack	99-12	130	59	
9-7x w/ Factory Rack	05-09	130	59	

SUBARU

Forester w/ Factory Rack	09-13	130	59	
Impreza Wagon w/ Raised Rails	12-13	105	48	
Impreza Wagon w/ Raised Rails	08-11	105	48	
Impreza Wagon w/ Raised Rails	02-07	105	48	
Legacy Outback w/ Factory Rack	00-06	90	41	
Outback Sport w/ Factory Rack	02-11	105	48	
Outback Wagon w/ Raised Rails	08-09	120	55	
Outback Wagon w/ Raised Rails	05-07	130	59	
Outback Wagon w/ Raised Rails	00-04	90	41	
WRX / STI Wagon w/ Raised Rails	12-13	105	48	
WRX / STI Wagon w/ Raised Rails	08-11	105	48	
WRX / STI Wagon w/ Raised Rails	02-07	105	48	



2013 COMPLETE ROOF RACK SYSTEM - SR1009 - FIT GUIDE

Vehicle Make and Model	Year	 Weight Limit		 Fit Tips
		Lbs	Kg	

SUZUKI

Esteem Wagon w/ Factory Rack	98-02	90	41	
Forenza Wagon w/ Factory Rack	05-08	105	48	
Grand Vitara w/ Factory Rack	99-06	130	59	
SX4 5DR w/ Factory Rack	07-13	130	59	1a
Vitara w/ Factory Rack	99-04	130	59	
XL7 w/ Factory Rack	01-06	130	59	

TOYOTA

4Runner 5DR w/ Factory Rack	03-09	130	59	
4Runner 5DR w/ Factory Rack	90-02	130	59	
Camry Wagon w/ Factory Rack	92-97	130	59	
Corolla Wagon w/ Factory Rack	93-97	90	41	
Corolla Wagon w/ Factory Rack	88-92	90	41	
Highlander w/ Factory Rack	08-09	130	59	
Previa w/ Factory Rack	91-98	90	41	
Rav 4 w/ Factory Rack	06-12	130	59	
Rav 4 w/ Factory Rack	01-05	130	59	
Sequoia w/ Factory Rack	08-13	130	59	
Sequoia w/ Factory Rack	01-07	130	59	
Sienna w/ Factory Rack	10-13	130	59	
Sienna w/ Factory Rack	04-09	130	59	
Sienna w/ Factory Rack	98-03	90	41	

VOLKSWAGEN

Golf Wagon w/ Factory Rack	10-12	130	59	
Jetta SportWagen w/ Factory Rack	09-13	130	59	
Passat Wagon w/ Factory Rack	07-10	130	59	
Passat Wagon w/ Factory Rack	98-08	130	59	
Passat Wagon w/ Factory Rack	90-97	130	59	
Tiguan w/ Factory Rack	12-13	130	59	
Tiguan w/ Factory Rack	08-11	130	59	

VOLVO

200 Series Wagon w/ Factory Rack	74-93	130	59	
700 Series Wagon w/ Factory Rack	83-92	130	59	
850 Wagon w/ Factory Rack	93-97	130	59	
V50 Wagon w/ Factory Rack	05-11	130	59	
V70 Wagon w/ Factory Rack	98-10	130	59	
V70 XC w/ Factory Rack	98-04	130	59	
XC70 w/ Factory Rack	01-13	130	59	
XC90 w/ Factory Rack	03-13	130	59	