



INSTALLATION INSTRUCTIONS STILLEN Grounding Kit

P/N 606358

07-08 350Z / 09 370Z

Materials supplied:

1. Grounding cable assembly
2. 5 6" cable ties
3. 1 M6 NUT
4. 1 M6x16mm FHCS

Equipment needed:

1. +,- Screwdriver
2. Assorted pliers/wrenches
3. Assorted sockets/ratchets

NOTE:



Installation:

1. Disconnect negative terminal of battery. Remove the decorative engine cover.
2. Using the cable with 3 wires and 4 ends, find the longest cable in the assembly. This cable will be routed and attached to the negative battery terminal using the provided nut (**PHOTO 1**)(A). Route the cable along the large wire loom that runs up the fender and into the battery box. The harness is surrounded by a grommet; the cable can be squeezed through here. Use the provided FHCS to attach point B (**PHOTO 1**)(B) to the threaded hole. Route the harness underneath the passenger side intake tube and attach to point C. (**PHOTO 1 & 2**)(C) Now you will need to attach the last grounding point on this harness onto the lower ground point, see (**PHOTO 2**)(D).
3. Next you will be installing the long single cable. Attach one end to point E (**PHOTO 2**)(E). Attach the opposite end of the cable to point F (**PHOTO 3**)(F).
4. Using the cable with 2 wires and 3 ends, find the short cable in the assembly and attach this end to point G (**PHOTO 3**)(G). Next you will need to route the harness underneath the intake tube and attach the mid-point to point H (**PHOTO 3**)(H). Lastly you will attach the end of the cable to point I (**PHOTO 3**)(I).
5. Connect the negative battery terminal and reinstall the decorative engine cover.
6. DONE!!!



WARNING:


IF YOU ARE NOT EXPERIENCED IN THE AREA OF AUTOMOTIVE MECHANICS WE STRONGLY URGE THAT YOU REFER THIS INSTALLATION TO YOUR MECHANIC.

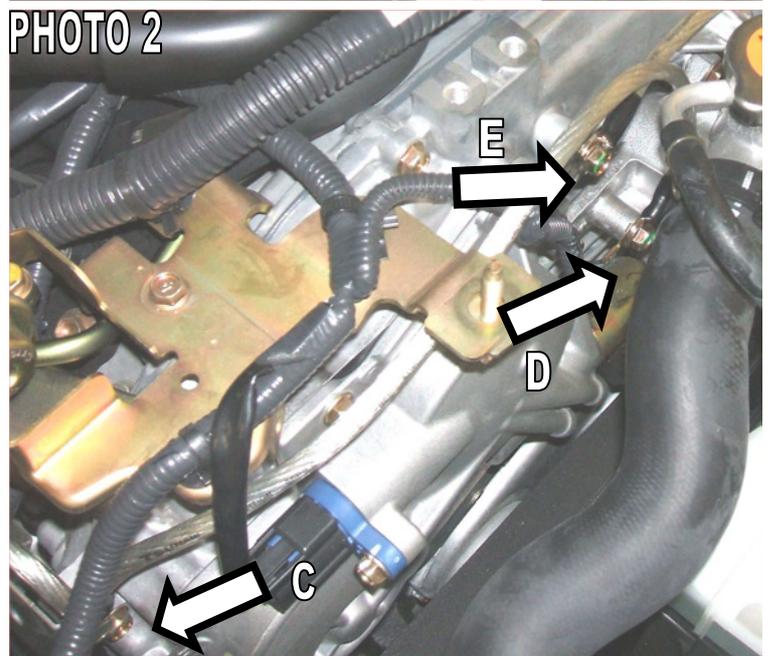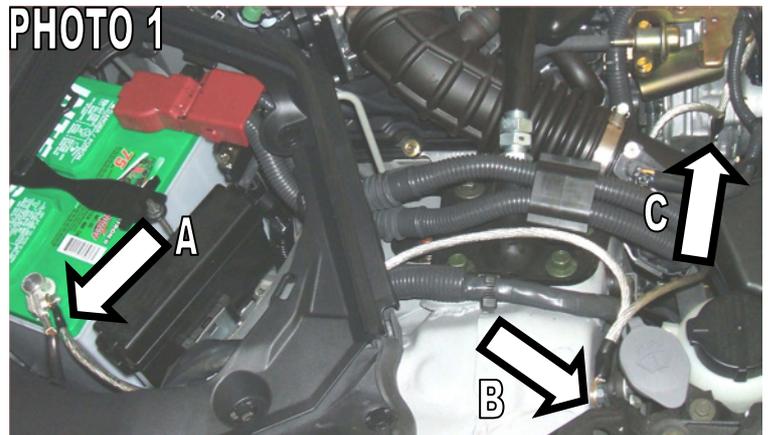

All rights reserved. No part of this publication may be reproduced, transcribed, transmitted, or translated into another language in any form, by any means without written permission of STEVE MILLEN SPORTPARTS, INC



PHOTO 3

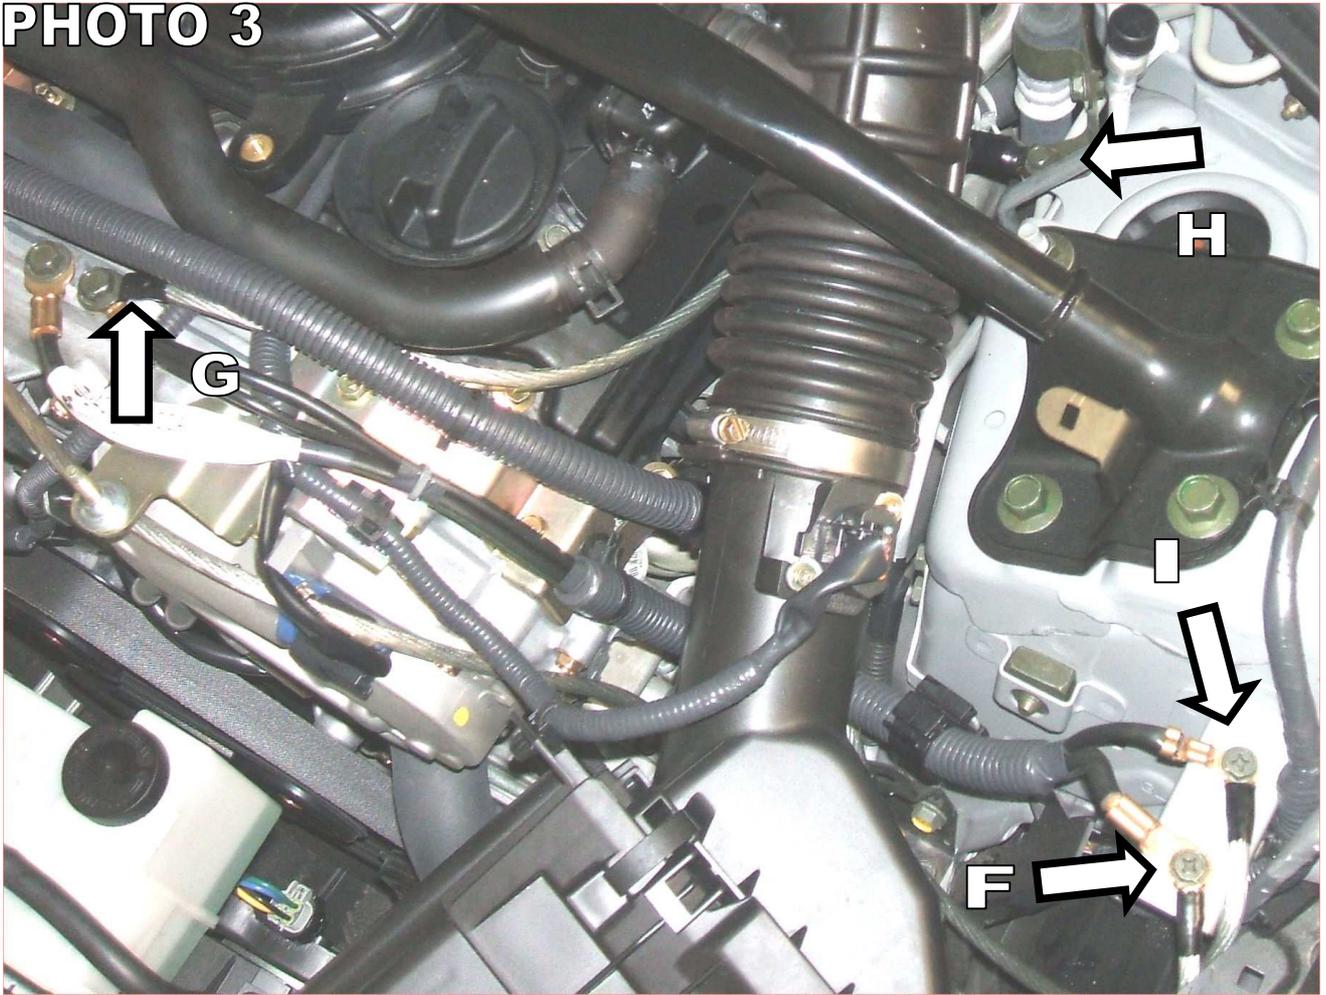



07-08 G35/ 08 G37 INSTALLATION

Installation:

1. Disconnect negative terminal of battery. Remove the decorative engine cover.
2. Using the cable with 3 wires and 4 ends, find the longest cable in the assembly. This cable will be routed and attached to the negative battery terminal using the provided nut (**PHOTO 1**)(A). Route the cable along the large wire loom that runs up the fender and into the battery box. The harness is surrounded by a grommet; the cable can be squeezed through here. Use the provided FHCS to attach point B (**PHOTO 1**)(B) to the threaded hole. Route the harness underneath the passenger side intake tube and attach to point C. (**PHOTO 1 & 2**)(C) Now you will need to attach the last grounding point on this harness onto the lower ground point, see (**PHOTO 2**)(D).
3. Next you will be installing the long single cable. Attach one end to point E (**PHOTO 2 & 3**)(E). Attach the opposite end of the cable to point F (**PHOTO 3**)(F).
4. Using the cable with 2 wires and 3 ends, find the short cable in the assembly and attach this end to point G (**PHOTO 3**)(G). Next you will need to route the harness underneath the intake tube and attach the mid-point to point H (**PHOTO 3**)(H). Lastly you will attach the end of the cable to point I (**PHOTO 3**)(I).
5. Connect the negative battery terminal and reinstall the decorative engine cover.
6. DONE!!!



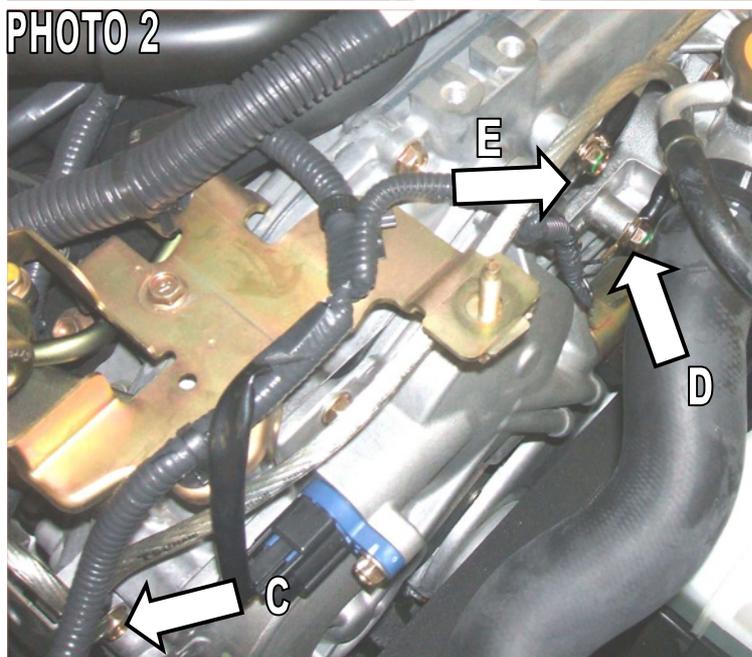




PHOTO 3

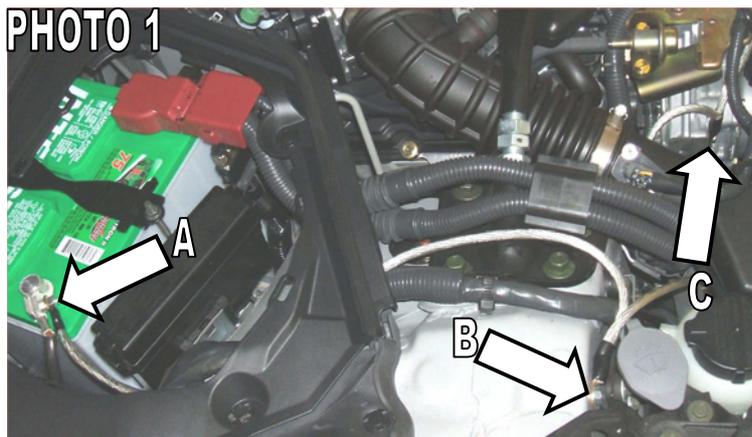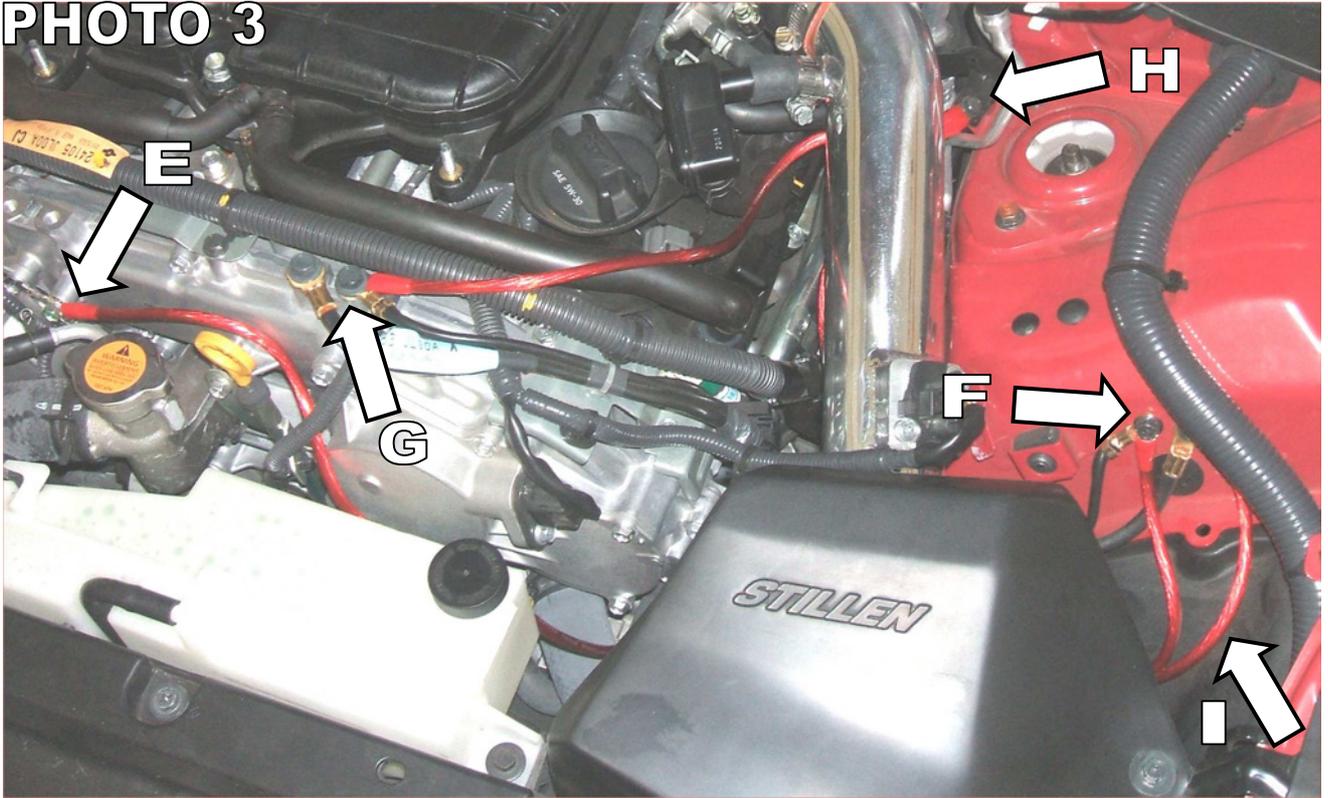

All rights reserved. No part of this publication may be reproduced, transcribed, transmitted, or translated into another language in any form, by any means without written permission of STEVE MILLEN SPORTPARTS, INC

Accept no compromises, choose only quality replacement starting & charging parts.