

JK HD Hinged Carrier Accessory

Mount

Part #4838200



Important Notes:

Prior to beginning this or any installation read these instructions to familiarize yourself with the required steps and evaluate if you are experienced and capable to personally perform these modifications.

Refer to the parts list to ensure that all necessary components and hardware have been included. If any parts are missing please contact your local retailer for assistance.

When a HI-Lift jack is installed onto the accessory mount, the jack MUST be in its lowest position to avoid damage to the right tail light lens when the tailgate is fully opened


Kit Contents		
Item ID	Item Name	Quantity
838210	Accessory Mount	1
838201	Aluminum Spacer	1
123	3/8" Lock Washer	2
33	3/8" x 2" Bolt	1
35	1/2" Lock Washer	3
4251	3/8" x 1.5" Bolt	1
84	3/8" Flat Washer	3
85	3/8 Nut, Flanged Serrated	1
5861	1/2" x 1" Button Head Bolt	3

Tools needed:

- Ratchet
- 5/16" Allen Socket
- 9/16" Combination Wrench
- 9/16" Shallow Socket

Accessory Mount Installation:

1. Fasten the Accessory Mount to the Teraflex HD Hinged Carrier by threading the 1/2" x 1" button head bolts with lock washers through the mount and into the carrier. Use the holes shown:

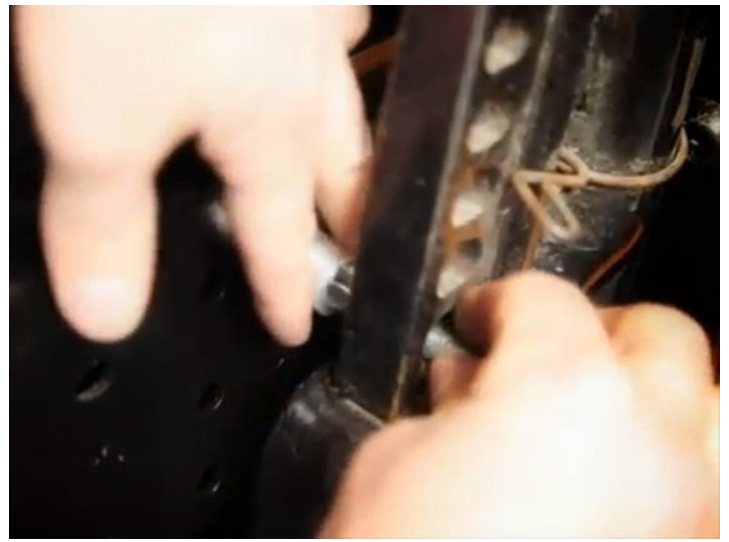

3. Insert the supplied 3/8" bolt with washer through the bottom side of the slot in the Accessory Mount pedestal and upward through the rear-most hole in the foot of the jack. Thread the supplied 3/8 serrated nut with lock washer onto the bolt.

Hi-Lift Jack Installation:

1. Place the Jack on the Accessory Mount pedestal.



2. Insert and hold the supplied aluminum spacer between the lowest hole on the jack handle and the threaded bung in the Accessory Mount. Thread the supplied 3/8" x 2" bolt with washer through the jack handle and spacer, and into the threaded bung. Do not tighten yet.



4. Tighten the bolt that secures the jack handle to the mount. Tighten the nut and bolt in the foot of the jack.

Installation is complete

Rotopax Installation:

If use of a rotopax is desired without a jack, proceed as follows:

1. Install the mount purchased from Rotopax onto the 4-hole pattern shown below:



2. A 2-gallon Rotopax gas container can be carried on this mount.

Note: The Hi-Lift jack handle Rotopax mount, Part #4838230, can be used to install both a Hi-Lift jack and a Rotopax container on the Teraflex HD Hinged Carrier Accessory Mount.