


North American English


PARTS INCLUDED

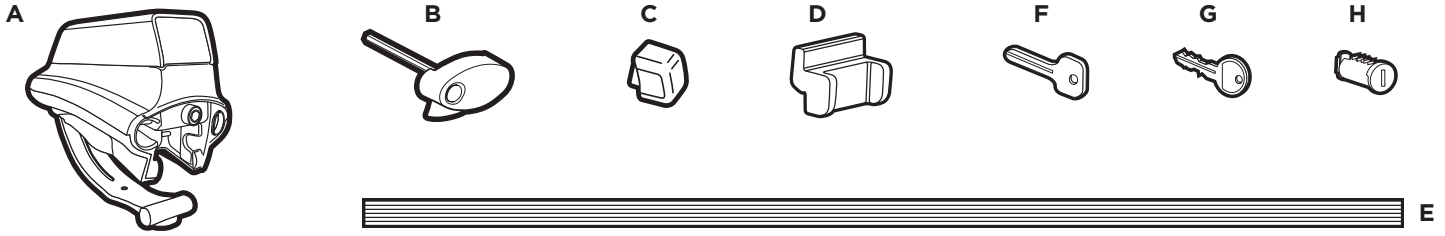

part	description	part number	450 qty.	4502 qty.
A	railing foot	7533399	4	2
B	handle assembly	75320064	4	2
C	endcap	8533593	4	2
D	2011- Ford Explorer adapter	8523023	4	2
E	load bar (45050)	853018213	2	—
	load bar (45058)	853018214	—	2
F	change key	8531251	1	1
G	locking key	—	4	4
H	lock	—	4	4

1

A

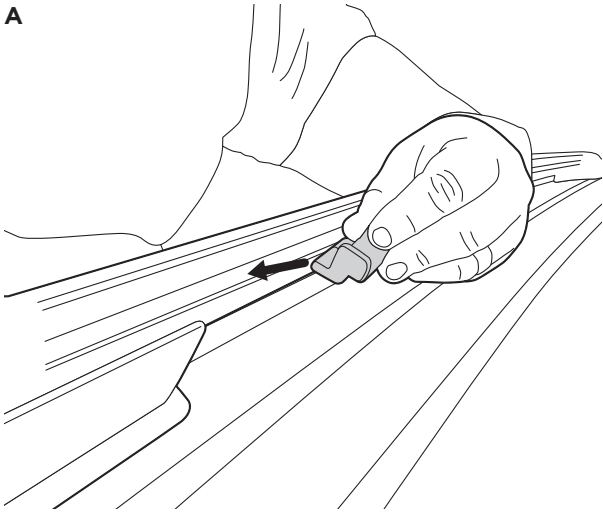


2011- FORD EXPLORER OWNERS ONLY:

A. Insert adapter into rail so that part number faces in and 'wings' face up.


B. Rotate adapter down towards roof. Adapter may click into place.

C. Adapter can slide side-to-side in rail to match desired foot position.

B

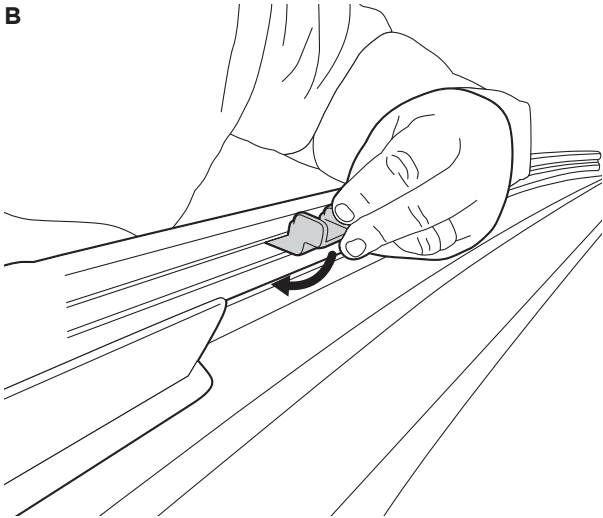


C

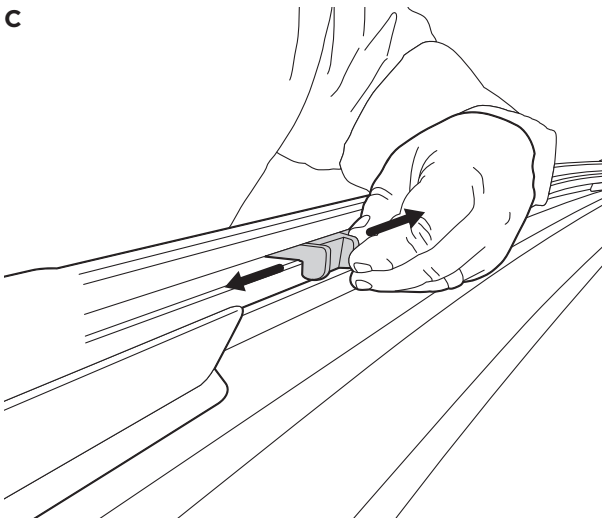


2


A

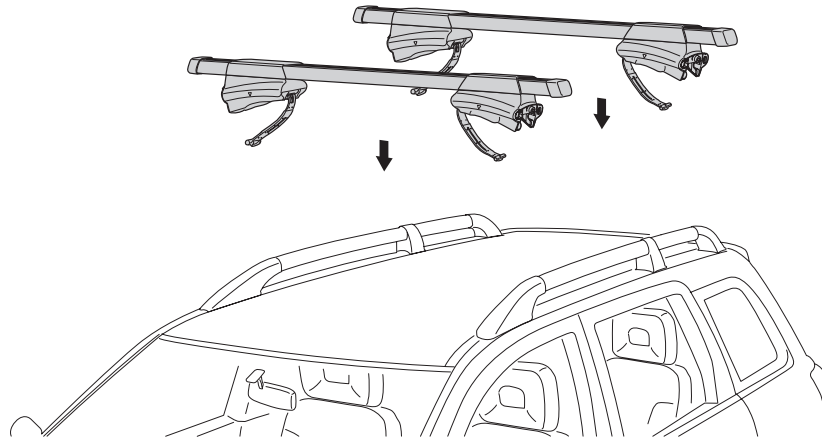

B




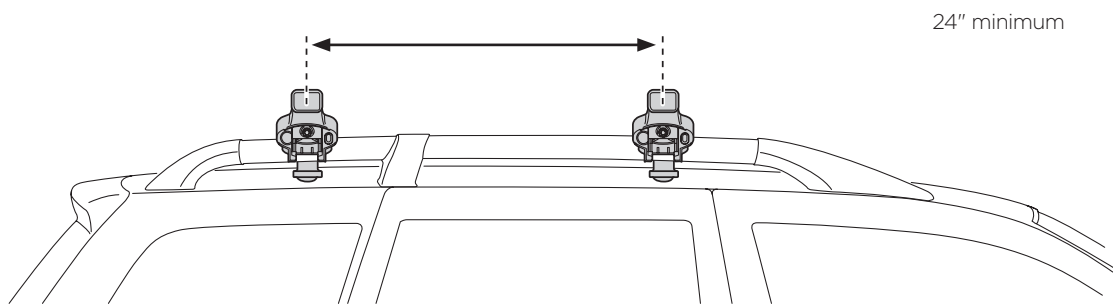


C

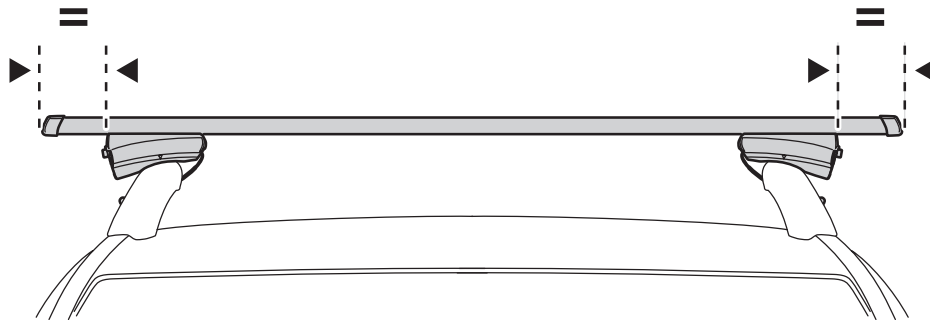


- A. Place load carrier on vehicle rails.
  - Use caution and do not let straps impact roof.
- B. Separate bars by a minimum of 24".
- C. Center feet on bars.

3




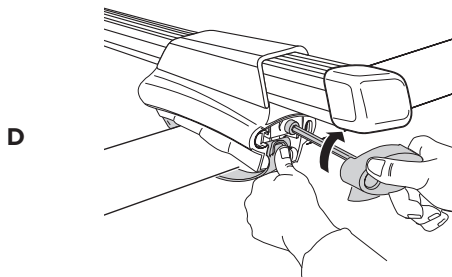
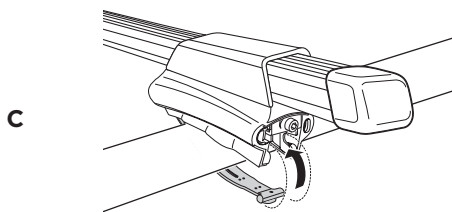
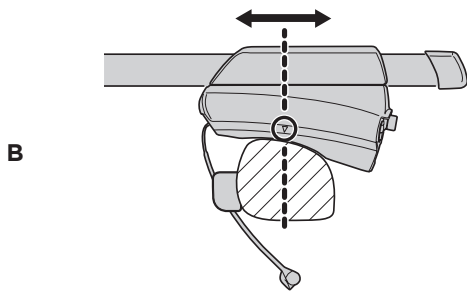
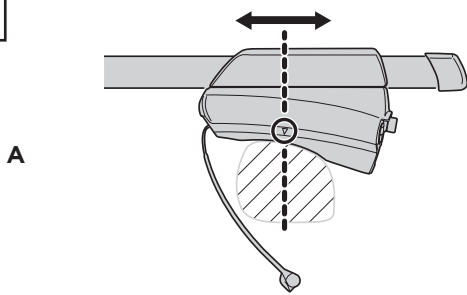


- A. Center foot and wrap strap around rail.
  - B. 2011- Ford Explorer owners ONLY: place adapter so that strap passes between adapter 'wings'.
  - C. Insert end of strap into foot.
    - If end of strap does not reach, increase length by loosening bolt with handle.
  - D. Hold strap in position and tighten foot with handle.
- NOTE: Grasp the carrier firmly and confirm it is securely fastened to the vehicles rails.

4

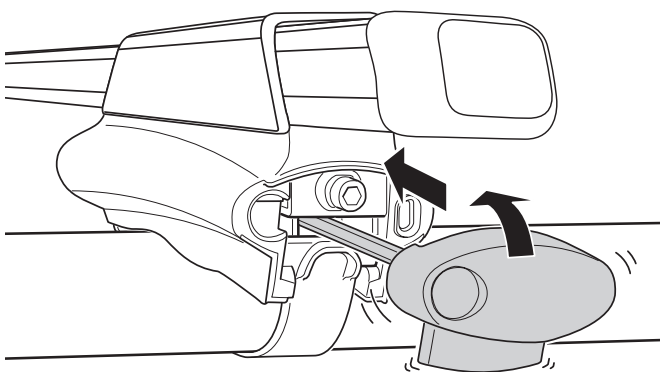

- Insert and snap handle into foot once rack is fully tightened.

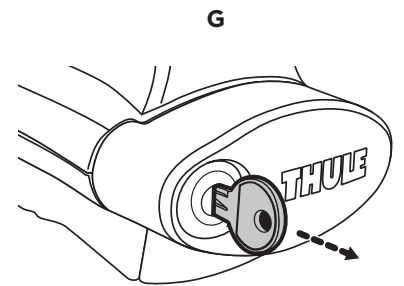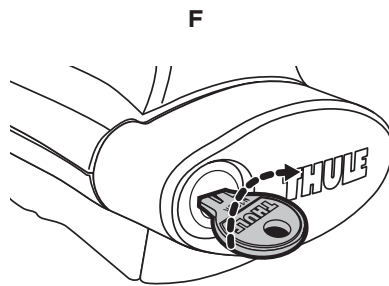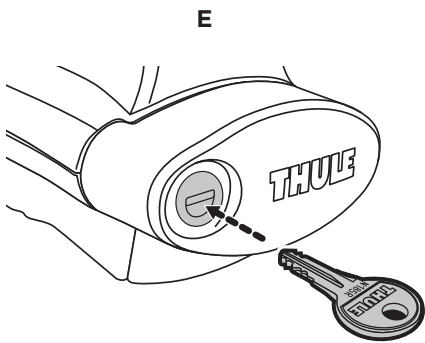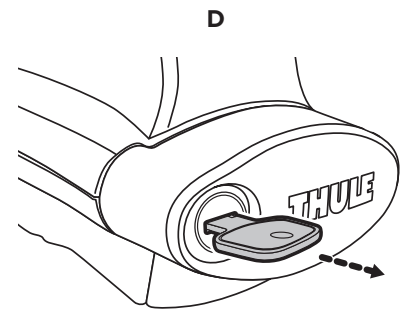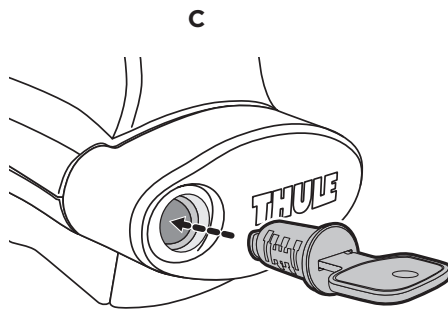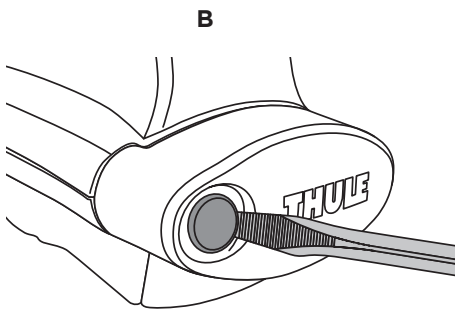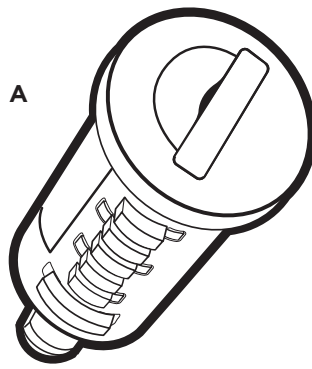

- Thule strongly recommends the use of locks to deter theft. As shown, follow these easy steps for installing the lock cylinders.