


# WeatherTech® BumpStep®XL

HITCH MOUNTED BUMPER PROTECTION

## Contents Included

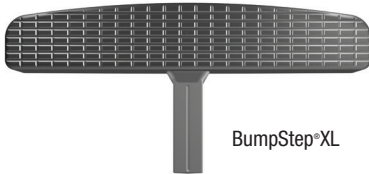

BumpStep®XL



Plated  
Hardware  
(Available only with  
the BumpStep®XL  
with Plated Hardware)



Stainless Steel  
Hardware  
(Available only with  
the BumpStep®XL  
with Theft Deterrent  
Stainless Hardware)

## Instructions



Slide the 2" square portion of your BumpStep®XL into your 2" receiver with the grooved step surface facing upwards.



Insert the BumpStep®XL to the hole that allows for enough room to fit just the ball of the foot centered on top with the tip of the shoe clearing the bumper.



Remembering the hole determined in step 2, remove the BumpStep®XL and insert the nut into the corresponding hex hole on the side of the post.



Slide the BumpStep®XL back into your receiver and insert the bolt with lock washer under the head of the bolt, then the flat washer. Flat washer can be eliminated if there is a clearance issue on your vehicle.



Tighten to a snug fit, do not over tighten (approximately 30-40 ft/lbs of torque.) For plated hardware, use 15/16" socket or wrench. For stainless hardware, use 1/2" hex key.

View [other Trailer Hitches](#) made [by WeatherTech](#) on our website.