(31") ZEON CONTROL PACK RELOCATION KIT

INSTALLATION GUIDE



Zeon Control Pack Relocation Kit 31" Cable Length

Every winching situation has the potential for personal injury. In order to minimize that risk, it is important to read this guide and The Basic Guide to Winching Techniques carefully. Please familiarize yourself with the operation of your winch before using it and be constantly safety oriented. In this guide we provide important safety information and instructions on how to install your Control Pack Relocation Kit. Please read the Basic Guide to Winching Techniques for information on how to properly use your winch and proper rigging techniques.

SYMBOL INDEX



GENERAL SAFETY PRECAUTIONS

Warnings and Cautions



As you read these instructions, you will see WARNINGS, CAUTIONS, NOTICES and NOTES. Each message has a specific purpose. WARNINGS are safety messages that indicate a potentially hazardous situation, which, if not avoided could result in serious injury or death. CAUTIONS are safety messages that indicate a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. A CAUTION may also be used to alert against unsafe practice. CAUTIONS and WARNINGS identify the hazard, indicate how to avoid the hazard, and advise of the probable consequence of not avoiding the hazard. NOTICES are messages to avoid property damage. NOTES are additional information to help you complete a procedure. PLEASE WORK SAFELY!



MOVING PARTS ENTANGLEMENT HAZARD

Failure to observe these instructions could lead to serious iniury or death.

General Safety:

- Always Know Your Winch. Take time to fully read the Instructions and/or Operations Guide, and/or Basic Guide to Winching Techniques, in order to understand your winch and its operations.
- Always keep wired remote control lead and power cord clear of the drum, rope, and rigging. Inspect for cracks, pinches, frayed wires or loose connections. Damaged components must be replaced before operation.



FALLING OR CRUSHING HAZARD

Failure to observe these instructions could lead to serious injury or death.

• Always stand clear, keep hands clear, keep others away.



CHEMICAL AND FIRE HAZARD

Failure to observe these instructions could lead to serious injury or death.

- Always remove jewelry and wear eye protection.
- Never route electrical cables across sharp edges.
- Never route electrical cables near parts that get hot.
- Never route electrical cables through or near moving parts.
- Always place the supplied terminal boots on wires and terminals as directed by the installation instructions.
- Never lean over battery while making connections.
- Never route electrical cables over battery terminals.
- Never short battery terminals with metal objects. • Always verify area is clear of fuel lines, fuel tank,
- brake lines, electrical wires, etc., when drilling.
- Always consult operator's manual for proper wiring details.
- Always insulate and protect all exposed wiring and electrical terminals.
- Never mount contactor with electrical terminals touching metal objects.



MOVING PARTS ENTANGI EMENT HAZARD

Failure to observe these instructions could lead to minor or moderate injury.

To avoid injury to hands or fingers:

- Never leave remote control where it can be activated during free spooling, rigging, or when the winch is not being used.
- Never leave the winch remote control plugged in when installing, freespooling, rigging, servicing or when the winch is not being used.

BEFORE YOU BEGIN

Please familiarize yourself with the components.


- Mounting Kit PN89970: Includes a mounting bracket and all needed hardware to mount your kit.
- Mounting Kit PN89965: Does not include a mounting bracket and you will need to purchase some additional hardware to complete mounting*.
- Bracket Kit PN89770 is available for purchase if you later decide to use a bracket for mounting.

Parts List

Description	Qty	Part Number	
31″ Wire Assembly Kit <u>with</u> Mounting Bracket	89970		
31" Cable Assembly	1	89663	
Wire housing top	1	89372	
M4 screw	2	64503	
Butt splice	1	85978	
31" ground extension	1	89963	
Bracket	1	89729	
M6 bolt	4	86346	
M6 lock washer	4	77009	
5/16" bolt	4	21331	
5/16" washer	8	1324	
5/16″ lock nut	4	2002	

Description	Qty	Part Number
31″ Wire Assembly Kit <u>withou</u> Mounting Bracket*	89965	
31" Wire Assembly	1	89663
Wire housing top	1	89372
M4 screw	2	64503
Butt splice (18 AWG)	1	85978
31" ground extension	1	89963
*M6 bolt needed	4	NOT INCLUDED IN KIT
*M6 lock washer needed	4	NOT INCLUDED IN KIT

OPTIONAL BRACKET KIT SOLD SEPARATELY				
Bracket Kit		89770		
Bracket	1	89729		
M6 Bolt	4	86346		
M6 Lock Washer	4	77009		
5/16″ Bolt	4	21331		
5/6″ Washer	8	1324		
5/16″ Lock Nut	4	2002		

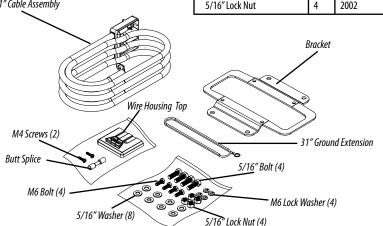

* NOTE: Four (4) M6 bolts and four (4) M6 lock washers must be purchased separately in order to complete installation without use of bracket.

31" Cable Assembly

BEFORE YOU BEGIN

Tools Required

- Torx Driver Set
- Ratchet/Wrench Set (Standard/Metric)
- Drill and Drill Bit Set
- Wire Cutters
- Wire Strippers/Wire Crimps
- Torque Wrench (30 lb. ft. capacity)
- Zip Ties
- Cable Protection (i.e., flexible electrical conduit or electrical tape)

Torque Specifications

Please use the recommended torque specifications when assembling this product unless otherwise specified in the instructions.

FASTENER SIZE (Grade 5)	FASTENER TORQUE		FASTENER TORQUE FASTENER SIZ (Class 8.8)		FASTENER TORQUE	
	lb-ft	(N.m)			lb-ft	(N.m)
1/4"	8	(11)		M4	(2)	3
5/16"	17	(23)		M5	(4.5)	6
3/8"	30	(40)		М6	(7.5)	10
7/16″	48	(66)		M8	(18)	25
1/2"	74	(100)		M10	(37)	50
9/16″	106	(144)				
5/8"	148	(200)				
3/4″	269	(364)				


Inspect all nuts and bolts on all related hardware periodically. Tighten all nuts that appear to be loose. Stripped, fractured, or bent bolts or nuts need to be replaced.

INSTALLATION INSTRUCTION

REMOVE CONTROL PACK FROM WINCH

A WARNING To prevent serious injury or death. Always place the supplied terminal boots on wires and terminals as directed by the installation instructions.


AWARNING To prevent serious injury or death from electrical fire:




Avoid pinch and wear/abrasion points when installing all electrical cables.

Awarning Always insulate and protect all exposed wiring and electrical terminals.

- Disconnect the vehicle battery cables, negative terminal first. All work with electrical wires and cables must be completed with the battery completely disconnected from the vehicle wiring.
- 2. Disconnect the ground cable on the under side of the winch (see Figure 1). Make sure the small black wire that connects to the control pack is disconnected and hanging freely.
- Remove the top buss bar cover by unscrewing the fastener holding it in place. Retain fastener for later use.
- Remove the three motor terminal nuts and lock washers that secure the buss bars to the motor. Retain the terminal nuts and lock washers for future step.
- Remove the four (4) flat head torx drive screws located on the underside of the tie plate. NOTE: Rope may need to be spooled out to complete this step.

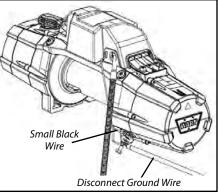



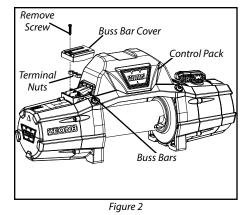

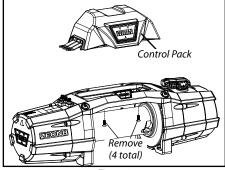


Figure 3

INSTALLATION INSTRUCTION

- 6. Once all four (4) control pack screws have been removed, gently lift the control pack off of the tie plate and set aside to be further disassembled.
- 7. Remove the motor terminal buss bar insulator after control pack has been removed.

INSTALLING RELOCATION CABLES

- 1. Disassemble the control pack by removing the four (4) flat head torx drive screws.
- 2. Gently lift the control pack cover off of the contactor plate assembly. The cover should remain wired to the contactor during this assembly process. Simply move the cover to one side or out of the way while working on the contactor. This cover will be reinstalled.
- 3. Remove terminal nuts and lock washers securing the three buss bars to the contactor (see Figure 6). Set aside terminal nuts and lock washers, as they will be used later on. Buss bars will not be used for new installation.
- 4. Loosen the two flat head torx drive screws securing the contactor to the contactor plate. Only loosen. Do not remove.
- 5. Using the terminal nuts and lock washers removed in previous step, connect the labeled cables (A, F1 and F2) to corresponding contactor terminal. Torque nuts to 8.5 - 9 N-m (75-80 in. lb.). Refer to Figure 7.
- 6. Tighten the two flat head torx drive screws and nuts used to secure the contactor to the contactor plate. Secure fasteners to specified torque requirements in torque specification chart found in these instructions.
- 7. Once the cables have been installed, reinstall the cover using the four (4) flat head torx drive screws previously removed. Refer to the torque section of this document.

Motor Terminal Buss Bar Insulator

Figure 4

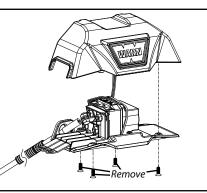
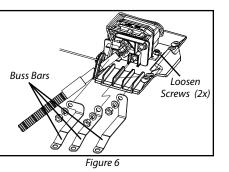


Figure 5




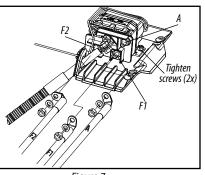


Figure 7

INSTALLATION INSTRUCTION

RELOCATING THE CONTROL PACK

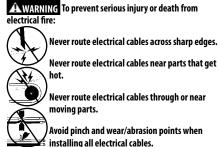



- 1. (Optional) Depending on your specific relocation kit, you can attach the shown bracket, for easier mounting, using the supplied hex head bolts and lock washers.
- 2. Find an appropriate mounting location to mount the control pack. Make sure to check that the cables and ground wire can be routed to the winch and that the control pack is easily accessible and on a solid mounting surface.

A WARNING Always verify area is clear of fuel lines, fuel tank, brake lines, electrical wires, etc., when drilling.

A WARNING Never mount contactor with electrical terminals touching metal objects.

- 3. If using the mounting bracket, match drill the 5/16" holes in the bracket to the mounting surface you choose to mount your control pack to. Be sure to check the area before you drill to avoid hitting any electrical cables or gas lines. If opting not to use the mounting bracket, you can use the attached template as a guide for drilling mounting holes. Holes should be drilled to 6.5mm diameter.
- 4. Mount the bracket using the supplied 5/16" bolts with two (2) flat washers and nylock nuts as shown. If opting not to use the mounting bracket, M6 screws and lock washers must be purchased separately to complete this installation.

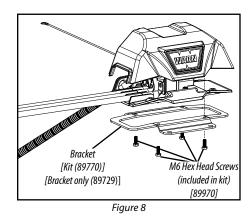

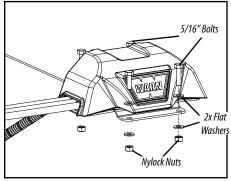




A WARNING To prevent serious injury or death from

INSTALLATION INSTRUCTION

CONNECTING THE CONTROL PACK

AWARNING Loose or unsecured power cables can cause serious injury or death.

- 1. Attach the wire terminal housing to the motor terminals on the winch using terminal nuts and lock washer previously removed.
- Install the cover plate and fasten with the two supplied machine screws. Do not over tighten screws, over tightening could damage the plastic components.
- 3. Use the supplied butt splice connector and the black extension wire to lengthen the contactor ground wire (see Figure 11).
- 4. Reconnect the ground cable and small black wire to winch motor ground. Ensure the ground wire is securely fastened. Secure fasteners to specified torque requirements in torque specification chart found in these instructions.
- 5. Carefully inspect electrical cable routing. Is it neat and tidy? Zip tie and secure electrical cables. Zip ties should be snug, but not cutting into wire insulation. Use electrical tape, pieces of rubber hose or electrical conduit to protect electrical cables and wire harness where needed to avoid electrical cable insulation wear or abrasion.
- Attach battery cables, red (positive) cable FIRST, black (negative) second. Install boots as appropriate to protect connections. Torque battery terminal fasteners as directed by vehicle service manual.
- Make sure to plug in the winch remote and ensure that drum is turning in the proper direction when spooling in/out before using in the field.



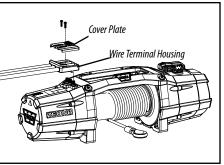
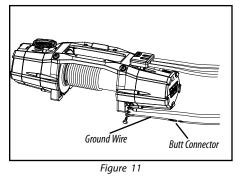


Figure 10



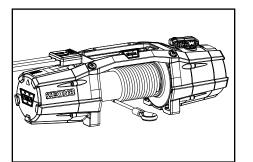


Figure 12

INSTALLATION INSTRUCTION

Mounting Hole Drill Template

