


INSTALLATION INSTRUCTIONS

For Glo Series Seat Covers



① Remove seat covers from box and ensure all necessary pieces are accounted for.

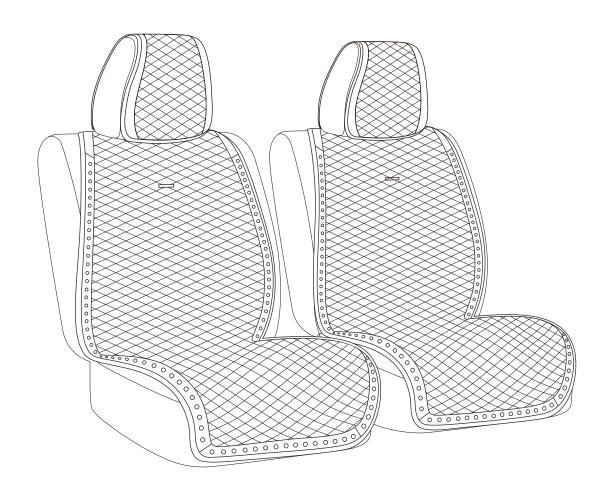


- ② Remove seat cover wiring harness from bag, plug into a 12-volt power source and connect it to the seats. Turn on the seat covers with the remote controller to ensure proper operation.
- ③ Install the ring anchors to the elastic loops on the back of the seat cover. Slide the strap into the slots, one side at a time.





④ Slide the seat cover over the headrest. Ensure the seat cover is centered over the seat.

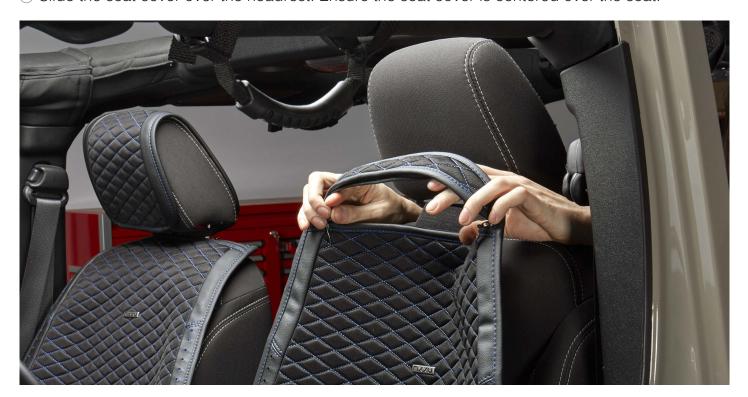



- ⑤ Attach the hook and loop fastener in between the rods of the headrest.
- ⑥ Zip up the zipper to the rods of the headrest on each side.

⑦ Install the ring anchors by sliding them sideways between the bottom seat cushion and backrest cushion. Once you slide the anchor through to the other side, make sure it flips 90 degrees to lock itself in place.








(8) Take the elastic strap on both sides of the seat cover, wrap it around the backrest of the seat and latch them together behind the seat.



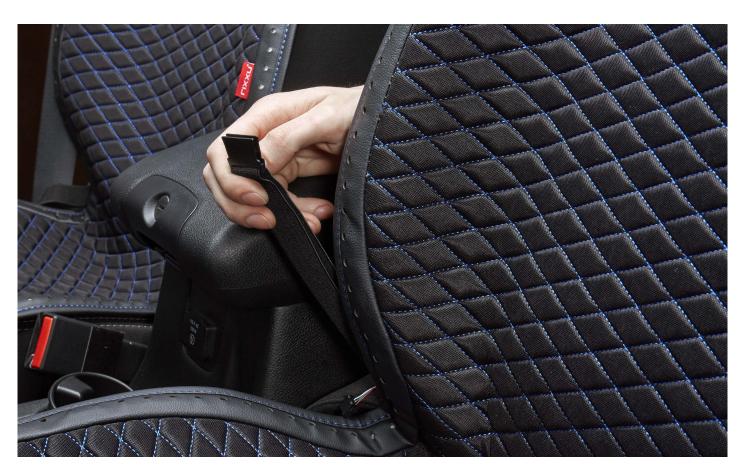




(9) Use the straps and hooks on the front of the seat cushion and attach them to the seat frame underneath the seat.

Note: Do not attach hooks to any moving parts of the seat or electrical components.






- [®] Run the wiring harness for the seat covers in a location where it will not be kicked, get wet, or crushed by a moving seat.
- 11) Plug the harness into the seat covers, you can use cable ties to tuck away any loose or extra lengths of wire.

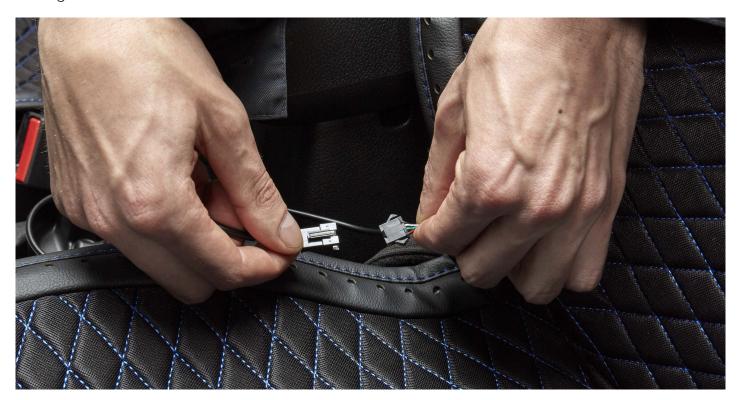








② Install the headrest cover onto the headrest. The wider side of the cover is the front. Wrap the elastic strap around the rods of the headrest and clip together. Pull the cover over the headrest and latch the other elastic strap with the same method as the first one.

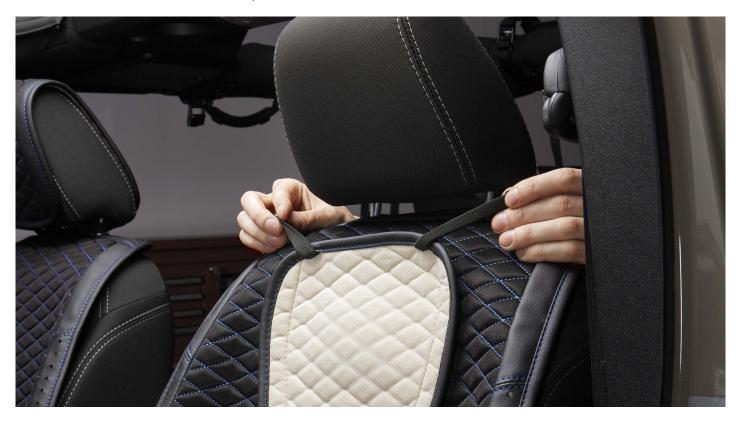

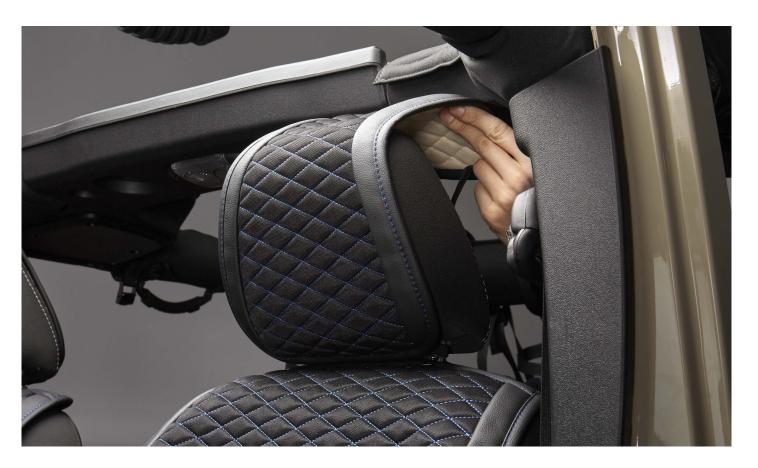

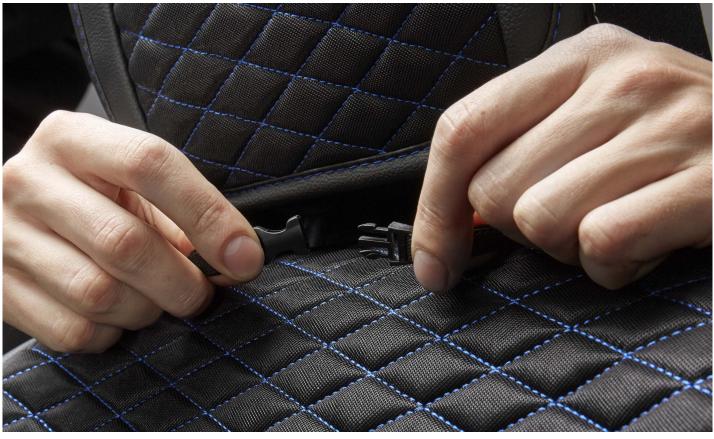


⁽³⁾ With the seat cover fully installed, move the seat forward and aft to ensure the wiring harness does not interfere with moving components. Use the provided Bluetooth remote to ensure all lighting functions operate properly.

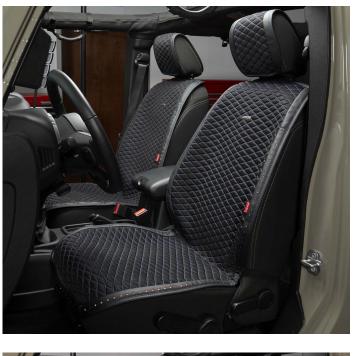





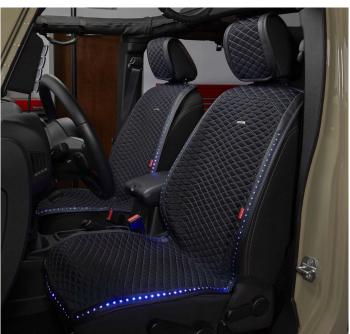

Take a look at other seat covers we have on our website.